


GC9912

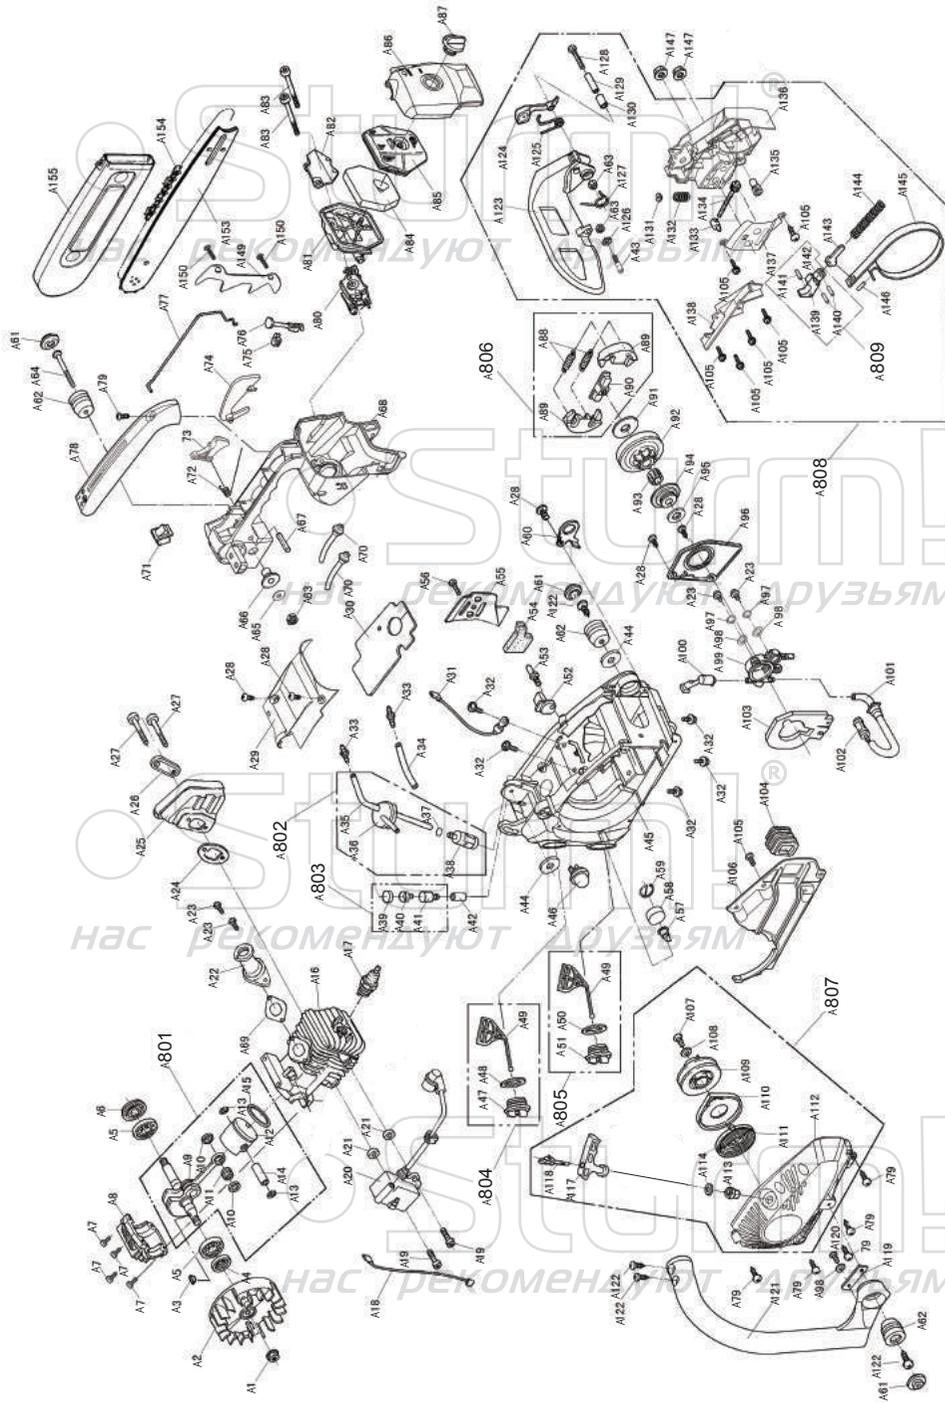

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
A1	NUT M8x1	A56	SCREW ST4.2x11	A111	STARTER SPRING
A2	FLYWHEEL-ASSY	A57	BREATH NIPPLE	A112	STARTER HOUSING
A3	WOODRUFF KEY3x10	A58	BREATH NIPPLE COVER	A113	ROPE JACKET
A4	SMALL OIL SEAL 12x22x4.5	A59	BREATH NIPPLE SPRING	A114	WASHER-STARTER HANDLE
A5	BALL BEARING 6001Z	A60	POTHOOK	A117	STARTER HANDLE
A6	BIG OIL SEAL 12x28x6	A61	RUBBER PAD COVER	A118	STARTER ROPE
A7	SCREW M5x20	A62	PAD	A119	PAD RUBBER SUPPTR
A8	CRANKCASE BEARING SUPPORT	A63	NUT M5	A120	SCREW ST3.5x10
A9	CRANK SHAFT ASSY	A64	SCREW M5x45	A121	HANDLE ASST
A10	NEEDLE BEARING SNAP	A65	WASHER	A122	SCREW ST4.8x16
A11	NEEDLE BEARING	A66	COVER CAP	A123	FRONT GUARD
A12	PISTON	A67	TRIGGER PIN 5x26	A124	LEVERAGE
A13	PIN CIRCLIP	A68	HANDLE	A125	LEVERAGE SPRING
A14	PISTON PIN	A69	INTAKE GASKET	A126	SPRING WASHER
A15	PISTON RING	A70	CARBURATOR PIPE	A127	BRAKE SPRING
A16	CYLINDER	A71	SWITCH STOP	A128	SCREW M5x30
A17	SPARK PLUG	A72	TRIGGER SPRING	A129	BUSHING
A18	FLAMEOUT WIRE	A73	TRIGGER	A130	LEVERAGE PIN
A19	SCREW M4x20	A74	TRIGGER LEVER	A131	BRAKE SPRING SUPPORT
A20	ELECTRON IGNITION ASSY	A75	CHOKE KNOB GROMMET	A132	FORNT GUARD SPRING
A21	PAPER GASKET	A76	CHOKE KNOB	A133	CHAIN ADJUSTING PIN
A22	INTAKE HOSE	A77	ROD THROTTLE	A134	CHAIN ADJUSTING SPROCKET
A23	SCREW M4x14	A78	REAR HANDLE COVER	A135	CHAIN ADJUSTING SCREW
A24	MUFFLER WASHER	A79	SCRW ST4.2x16	A136	RIGHT COVER
A25	MUFFLER ASSY	A80	CHINESE CARBURATOR ASSY	A137	CHAIN ADJUSTING COVER
A26	MUFFLER COVER	A81	AIR FILTER SUPPORT	A138	SPRING BRAKE COVER
A27	SCREW M5x40	A82	AIR FILTER COVER	A139	MAIN LEVER
A28	SCREW ST4.2x13	A83	SCREW M5x45	A140	SHORT PIN
A29	TOP COVER	A84	AIR FILTER SPONGE	A141	LONG PIN
A30	PAPER GASKET	A85	AIR FILTER SPONGE COVER	A142	AUXILIARY LEVER
A31	GROUND WIRE	A86	AIR FILTER COVER	A143	BREAK LEVEL
A32	SCREW M5x16	A87	AIR FILTER KNOB	A144	BRAKE SPRING
A33	HOSE ADAPTER	A88	CLUTCH SPRING	A145	BAND BRAKE
A34	OIL RETURN PIPE	A89	CLUTCH SUPPORT	A146	PIN
A35	FUEL HOSE	A90	CLUTCH RETAINER	A147	BAR NUT
A36	FUEL HOSE SUPPORT	A91	CLUTCH WASHER	A149	SPIKE
A37	CONNECT PIPE CLIP	A92	CLUTCH DRUM	A150	SCREW ST4.8x14
A38	FUEL FILTER	A93	CLUTCH NEEDLE BEARING	A153	GUIDE BAR
A39	BALANCE COVER	A94	WORM	A154	CHAIN
A40	BALANCE BODY	A95	OIL PUMP WASHER	A155	BAR PROTECTOR
A41	BALANCE HOUSING	A96	OIL PUMP COVER	A801	CRANK SHAFT AND PISTON ASSY
A42	BALANCE CONNECTOR	A97	SPRING WASHER	A802	FUEL FILTER ASSY
A43	PIN	A98	WASHER	A803	BALANCE ASSY
A44	WASHER	A99	OIL PUMP ASSY	A804	FUEL CAP ASSY
A45	FUEL TANK	A100	FUEL INJECTION NOZZLE	A805	OIL CAP ASSY
A46	PRIMER BULB	A101	OIL INLET HOSE	A806	CLUTCH ASSY
A47	FUEL CAP	A102	OIL FILTER	A807	STARTER ASSY
A48	FUEL CAP WASHER	A103	DUSTPROOF SPONGE	A808	BRAKE ASSY
A49	OIL CAP HOLDING	A104	AIR INTAKE SUPPORT	A809	MAIN AND AUXILIARY LEVER ASSY
A50	OIL CAP WASHER	A105	SCREW ST4.2x8.5		
A51	OIL CAP	A106	FAN BAFFLE		
A52	CHAIN CATCHER	A107	SCREW ST4.8x16		
A53	SCREW	A108	WASHER φ5x15x1.5		
A54	BAR PLATE SPONGE	A109	PULLEY STARTER		
A55	BAR PLATE	A110	SPRING COVER		