


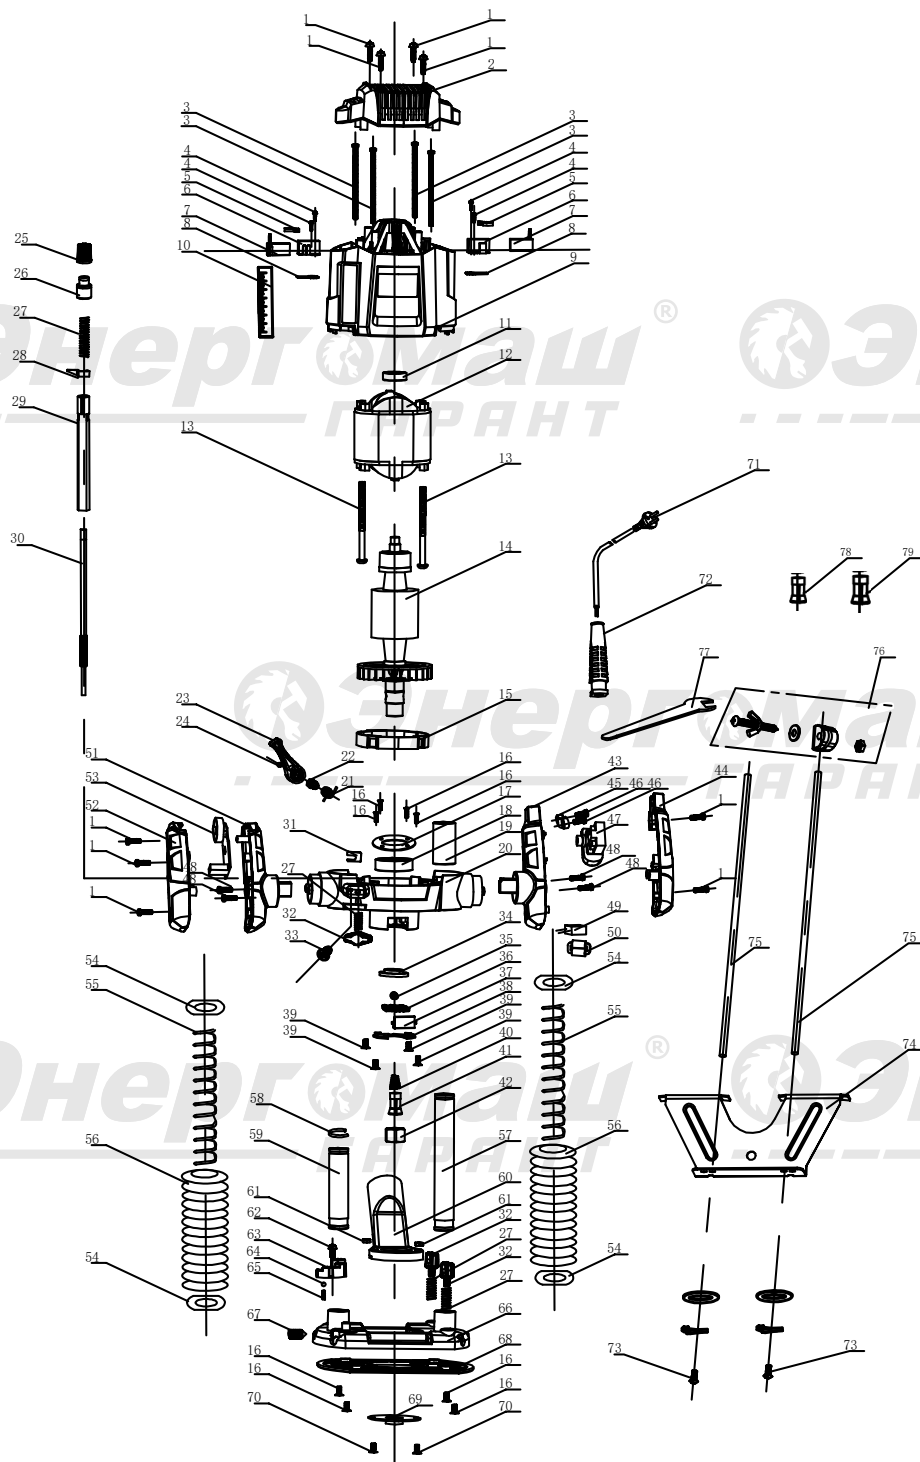

ФР1-1200

NO.	DESCRIPTION	NO.	DESCRIPTION
1	ST4x16 Screw	40	Collet spring
2	Rear cover	41	Collet
3	M4x90 Screw	42	Collet nut
4	ST3x8 Screw	43	Right handle base
5	Carbon brush ring	44	Right handle cover
6	Copper brush holder	45	Cable board
7	Carbon brush	46	ST4x14 Screw
8	Brush holder gasket	47	Switch
9	Body housing	48	M5x16 Screw
10	Depth label	49	0.33 Capacitor
11	608 Bearing	50	Conductor
12	Stator	51	Left handle base
13	ST5x60 Screw	52	Left handle base
14	Armature	53	Variable speed
15	Wind-proof ring	54	Spring gasket
16	M4x8 Screw	55	adjust spring
17	6003 Bearing pressure plate	56	Adjust sleeve
18	6003 Bearing	57	Long blank pipe
19	21x18x55 Bearing with oil	58	Steel spring
20	Head cover	59	Short blank pipe
21	Lock spring	60	Dust collect cover
22	Screw	61	M4 Nut
23	Lock handle	62	M5X12 Screw
24	M4x12 Screw	63	Fixed block
25	Mini adjust button	64	Φ6 Steel ball
26	Gauge	65	Fixed block spring
27	Butterfly type spring	66	Base
28	Ruler pin	67	M6X15 Screw
29	Ruler pole	68	Plastic base
30	Ruler screw	69	Sample guage
31	Piece	70	M4x18 Screw
32	M6x10 Screw	71	Cable
33	M4x8 Screw	72	Cable sleeve
34	Inner screw pressure plate	73	M5x10 Screw
35	Auto-lock spring	74	Guide pieces
36	Auto-lock pin	75	Guide pole
37	Auto-lock button	76	Clamp
38	Plastic cover	77	Spanner
39	M4x10 Screw	78	Collet 6mm
		79	Collet 8mm

FR1-1200-EX-RUS20221114