


ЭЛЕКТРОДВИГАТЕЛЬ ДЛЯ ПТС-99520Т

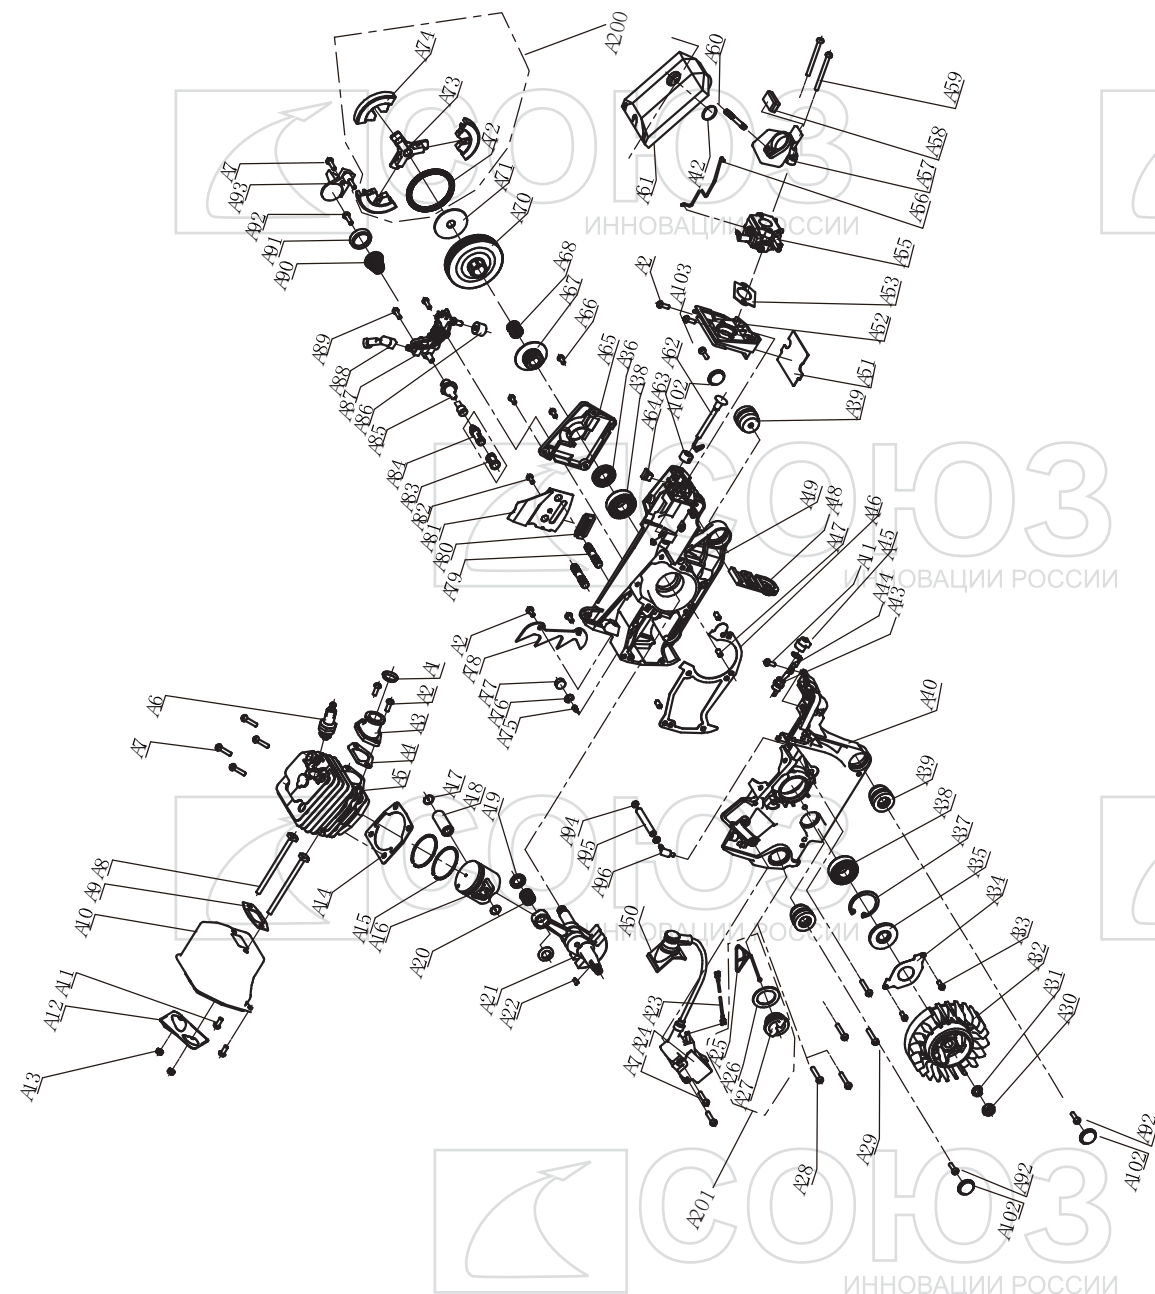

NO.	DESCRIPTION	NO.	DESCRIPTION
A1	RETAINING RING	A51	PLATE
A2	SCREW TX M5x14	A52	INTAKE PIPE SUPPORT
A3	INTAKE-TUBE	A53	CARBURETOR GASKET
A4	INTAKE MANIFOLD GASKET	A55	CARBURETOR
A5	CYLINDER BLOCK	A56	THROTTLE ROD
A6	SPARK PLUG	A57	THE AIR INLET ELBOW
A7	SCREW TX M5x20	A58	SHOCK ABSORBER RUBBER SLEEVE
A8	MUFFLER BOLT M5*87	A59	CARBURETOR SCREW
A9	MUFFLER GASKET	A60	STUD BENDS
A10	MUFFLER	A61	AIR FILLER
A11	SCREW M5*10	A62	DAMPER
A12	SILENCER COVER	A63	CHOKE ROD DAMPING
A13	M5 NUT	A64	THROTTLE PULL ROD
A14	CYLINDER GASKET	A65	THE OIL PUMP COVER
A15	RING-PISTON	A66	COVER SCREW M4*12
A16	PISTON	A67	TURBINE
A17	PISTON PIN CIRCLIP	A68	(CLUTCH DRIVEN DISK) BEARING
A18	PISTON PIN	A70	CLUTCH HOSE
A19	BEARING RETAINER	A71	THE LFY HAMMER WEAR PAD
A20	HEAD NEEDLE ROLLER BEARINGS-11*-15*12.5	A72	CLUTCH SPRING
A21	CRANKSHAFT AND CONNECTING ROD	A73	THE HOLDER
A22	WOODRUFF KEY 3*10	A74	FLY HAMMER
A23	FLAMEOUT SWITCH LINE	A75	AIR NOZZLE
A24	COIL	A76	AIR NOZZLE CIRCLIP
A25	OIL FILLER CAP OIL FILM	A77	AIR NOZZLE SPONGE
A26	FUEL TANK CAP GASKET	A78	TOOTH PLATE
A27	OIL FILLER CAP	A79	STUD
A28	SCREW TX M5x25	A80	CHAIN GUIDE BLOCK
A29	SCREW TX M5x30	A81	OIL OUTLET COVER
A30	SCREW M8*1	A82	SCREW M4*10
A31	ELASTIC PAD -8	A83	OIL FILTER NETTING
A32	ROTOR	A84	OIL FILTER
A33	SEAL BAFFLE SCREW M4*6	A85	OIL PUMP INLET PIPE
A34	SEAL BAFFLE	A86	DUST FILTER COTTON
A35	SEAL-15*-35*4.5	A87	OIL PUMP
A36	SEAL-15*-28*4.5	A88	OIL PUMP OUTLET PIPE
A37	RING-35	A89	SCREW M4*12
A38	BEARING 6202	A90	A TOWER SHAPED SPRING
A39	SHOCK ABSORBING SEAT	A91	A TOWER SHAPED SPRING SEAT
A40	THE LEFT BOX	A92	SCREW ST4.8*16
A43	FLAMEOUT SWITCH	A93	CHAIN BLOCK
A44	GROUNDING SHEET	A94	THE NEGATIVE PRESSURE PIPE CLAMP SPRING
A45	FLAMEOUT SWITCH SEAT	A95	THE NEGATIVE PRESSURE PIPE
A46	BOX SEALING PAD	A96	NEGATIVE PRESSURE NOZZLE
A47	POSITIONING PIN	A102	DUST COVER
A48	DUSTPROOF RUBBER BLOCK	A200	CLUTCH SPRING/BLOCK ASSEMBLY
A49	THE RIGHT BOX	A201	OIL FILLER CAP ASSEMBLY

ПТС-99520Т

NO.	DESCRIPTION	NO.	DESCRIPTION
A97	LOCK NUT	A138	CYLINDRICAL PIN 3*9
A98	RUBBER GASKET	A139	AUXILIARY LEVER
A99	AIR FILTER COVER	A140	BRAKE CONTROL LEVER
A100	THE UPPER COVER	A141	MAIL SPRING
A101	LDING ADJUSTING GUIDE SLEEVE	A142	AUXILIARY SPRING
A103	SCREW ST4.8*12	A143	LIMITING PIN
A104	AIR DEFLECTOR	A144	FRONT BAFFLE
A105	START COVER JACKET	A145	3-RING
A106	THE ROPE ROUND GASKET	A146	FRONT PLATE PIN
A107	SMALL ROPE WHEEL	A147	4-RING
A108	BIG SPRING	A148	LIMITING PLATE
A109	BIG ROPE WHEEL	A150	RIGHT SIDE PLATE
A110	START SPRING	A151	SCREW M8
A111	LH SHEATH	A152	BRAKE BAND
A112	START PULLING ROPE	A153	OIL BAFFLE PLATE
A113	STARTING HANDLE	A154	GUIDE PLATE
A115	STARTER COVER	A155	FRONT BAFFLE CASING
A116	FUEL FILTER	A156	BRAKE SPRING
A118	FUEL PIPE	A157	SHIM 6*18
A120	SCREW M5*12	A158	RUBBER RING
A121	LONG DAMPING	A159	SCREW ST4.2*9.5
A122	BALANCER SEAT	A160	SPRING COVER
A123	BALANCER VENTILATION MOUTH	A161	CARD
A124	BALANCER BODY	A162	TENSIONING BLOCK
A125	BALANCER COVER	A163	TENSIONING SCREW
A126	CYLINDRICAL PIN	B164	CHAIN GUIDE
A127	THE TRIGGER SPRING	B165	CHAIN SAW
A128	TRIGGER	B166	CHAIN GUIDE COVER
A129	HANDLE COVER	A167	FILE
A130	THE TRIGGER CONTROL ARM	A168	T4 SPANNER
A131	SCREW ST5*19	A169	T3 SPANNER
A132	FUEL TANK	A170	SOCKET WRENCH
A133	FUEL FILM	A171	SCREW DRIVE
A134	OIL SEAL	A202	STARTER ASSEMBLY
A135	FUEL FILLER CAP	A203	RIGHT COVER ASSEMBLY
A136	GRIP	A204	FUEL FILLER CAP ASSEMBLY
A137	THE MAIL LEVER		

SO-RU20170109 VER: 2.2

