

NO.	DESCRIPTION
4A	ADJUSTMENT KNOB
1	INDEX
2	CAP RING
5	ADJUSTMENT
6	WASHER
7	GRINDING WHEEL
8	WHEEL BASE
9	SPRING
10	SCREW
11	COVER
12	HOUSING
13	BALL BEARING
14	DRIVE SPINDLE
15	NUT
16	CONNECTOR-MALE
17	UPPER MOTOR HOUSING
18	BOLT
19	MOTOR
20	COVER
21	TERMINAL
22	CAPACITOR
23	LOWER MOTOR HOUSING
24	SWITCH
25	SCREW
26	CABLE
27	RUBBER PAD
28	SCREW