


RH2532V

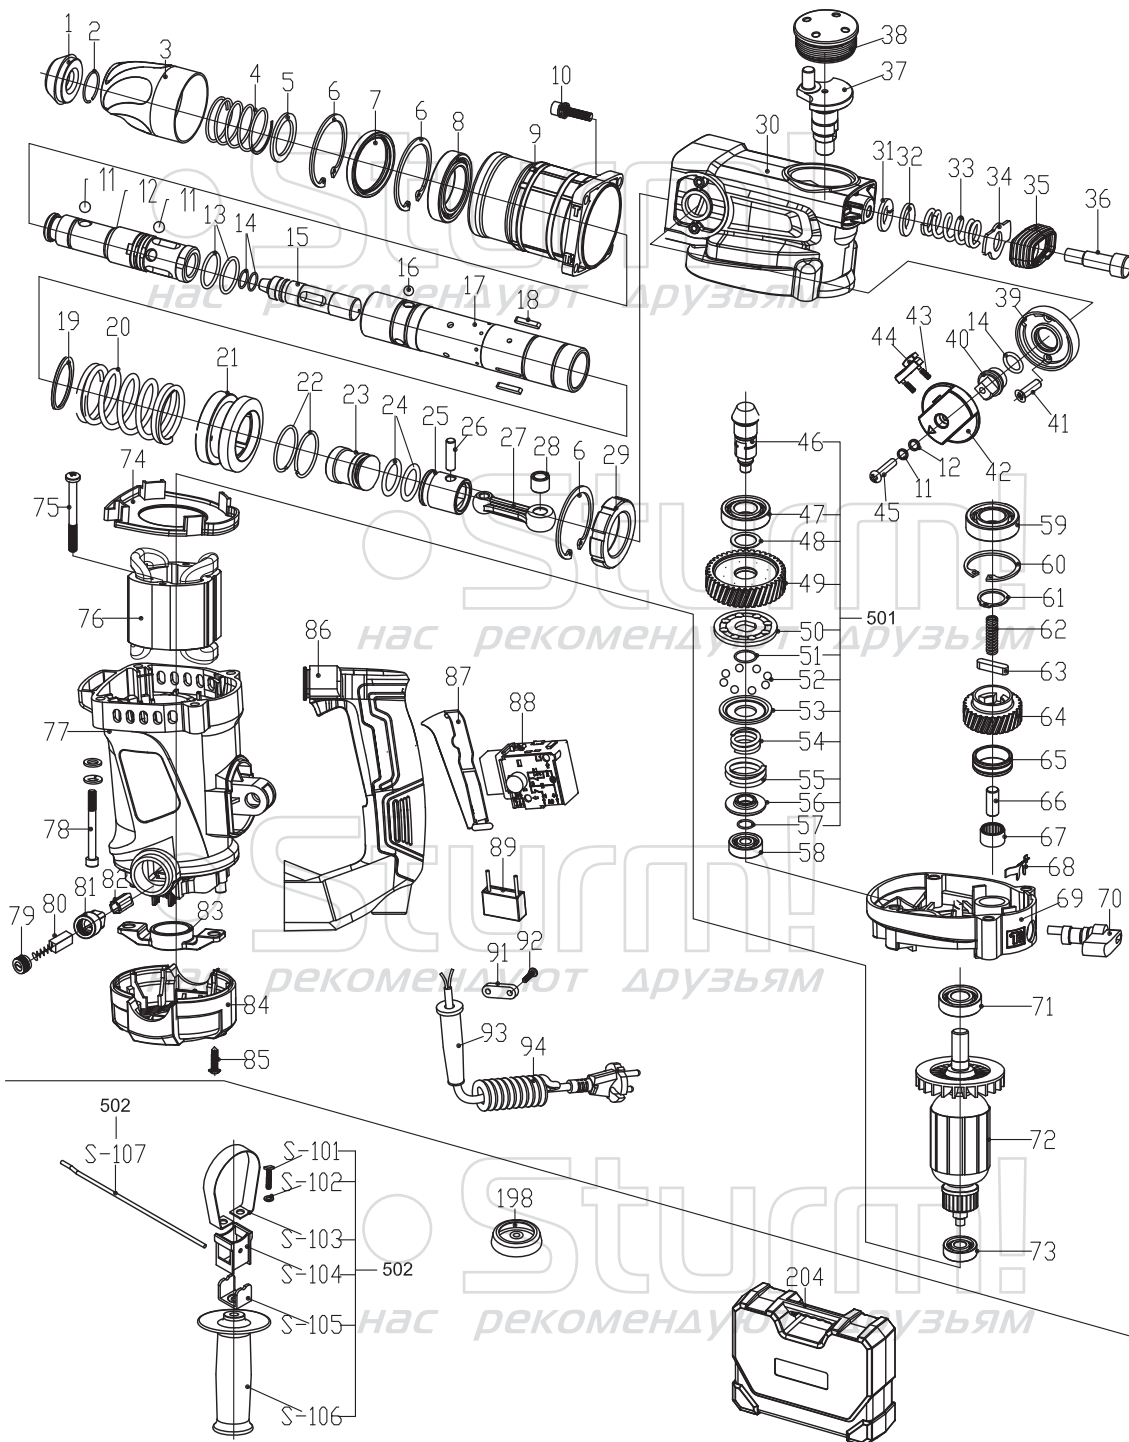

NO.	DESCRIPTION	NO.	DESCRIPTION
1	FRONT COVER	53	TRIP ACTIVE PLATE
2	CLIP RING	54	TRIP INSIDE SPRING
3	STEEL BALL BLOCK	55	TRIP OUTSIDE SPRING
4	STEEL BALL BLOCK SPRING	56	TRIP SPRING SEAT
5	STEEL BALL BLOCK SPRING PLATE	57	CLIP RING
6	CLIP RING	58	BERING 6272
7	OIL SEALING	59	BERING 6003Z
8	BEARING 61906	60	CLIP RING 35
9	FRONT PLACKET	61	CLIP RING 17
10	SCREW M5*22	62	TOP HAMMER SPRING
11	STEEL BALL 7.14	63	FLAT KEY
12	ROTATE SLEEVE	64	FIRST GEAR
13	O RING 19.8*2	65	SUPPORT COVER
14	O RING 11*2	66	HAMMER
15	IMPACT HAMMER	67	NEEDLE BEARING HK1210
16	STEEL BALL	68	BUTTERFLY CARD
17	CYLINDER	69	MIDDLE COVER
18	FLAT KEY	70	BUTTON
19	BIG SPRING PLATE	71	BEARING 6000
20	BIG SPRING	72	ROTOR
21	BIG GEAR	73	BEARING 608
22	CLIP RING 27.6*1.6	74	GUIDE RING
23	AIR HAMMER	75	SCREW ST4X55
24	O RING 18*3.05	76	STATOR
25	PISTON 24MM	77	HOUSING
26	PISTON PIN	78	SCREWM5X55
27	CONNECTING ROD	79	BRUSH HOLDER COVER
28	SMALL OIL BEARING	80	CARBON BRUSH
29	OIL BEARING	81	CARBON BRUSH HOLDER
30	GEAR BOX	82	CARBON BRUSH COPPER
31	SPRING RING	83	BEARING SEAT
32	FLAT PLATE	84	BACK COVER
33	DAMPING SPRING	85	SCREW ST4X20
34	DAMPING PLATE	86	HANDLE
35	DAMPING RUBBER SLEEVE	87	SWITCH HAND
36	DAMPING SCREW	88	SWITCH
37	ECCENTRIC SHAFT	89	CAPACITANCE
38	OIL COVER	91	CABLE CLAMP
39	KNOB SEAT	92	SCREWST4X16
40	KNOB SHAFT	93	CABLE SHEATH
41	SCREW M4X12	94	CABLE
42	KNOB	S-101	SCREW
43	BUTTON SPRING	S-102	FLAT PLATE
44	BUTTON	S-103	CLOSING RING OF ASSIST HANDLE
45	SCREW M5X12	S-104	AL SURPORT.
46	SMALL GEAR	S-105	BRACKET OF ASSIST HANDLE
47	BERING 16002	S-106	ASSIST HANDLE
48	SMALL GEAR BEARING GASKET	S-107	DEPTH GAUGE
49	SECOND GEAR	198	DUST COVER
50	TRIP FIXED PLATE	204	BMC
51	CLIP RING	501	SMALL GEAR ASSEMBLY
52	STEEL BALL	502	ASSIST HANDLE ASSEMBLY