


# SE1632

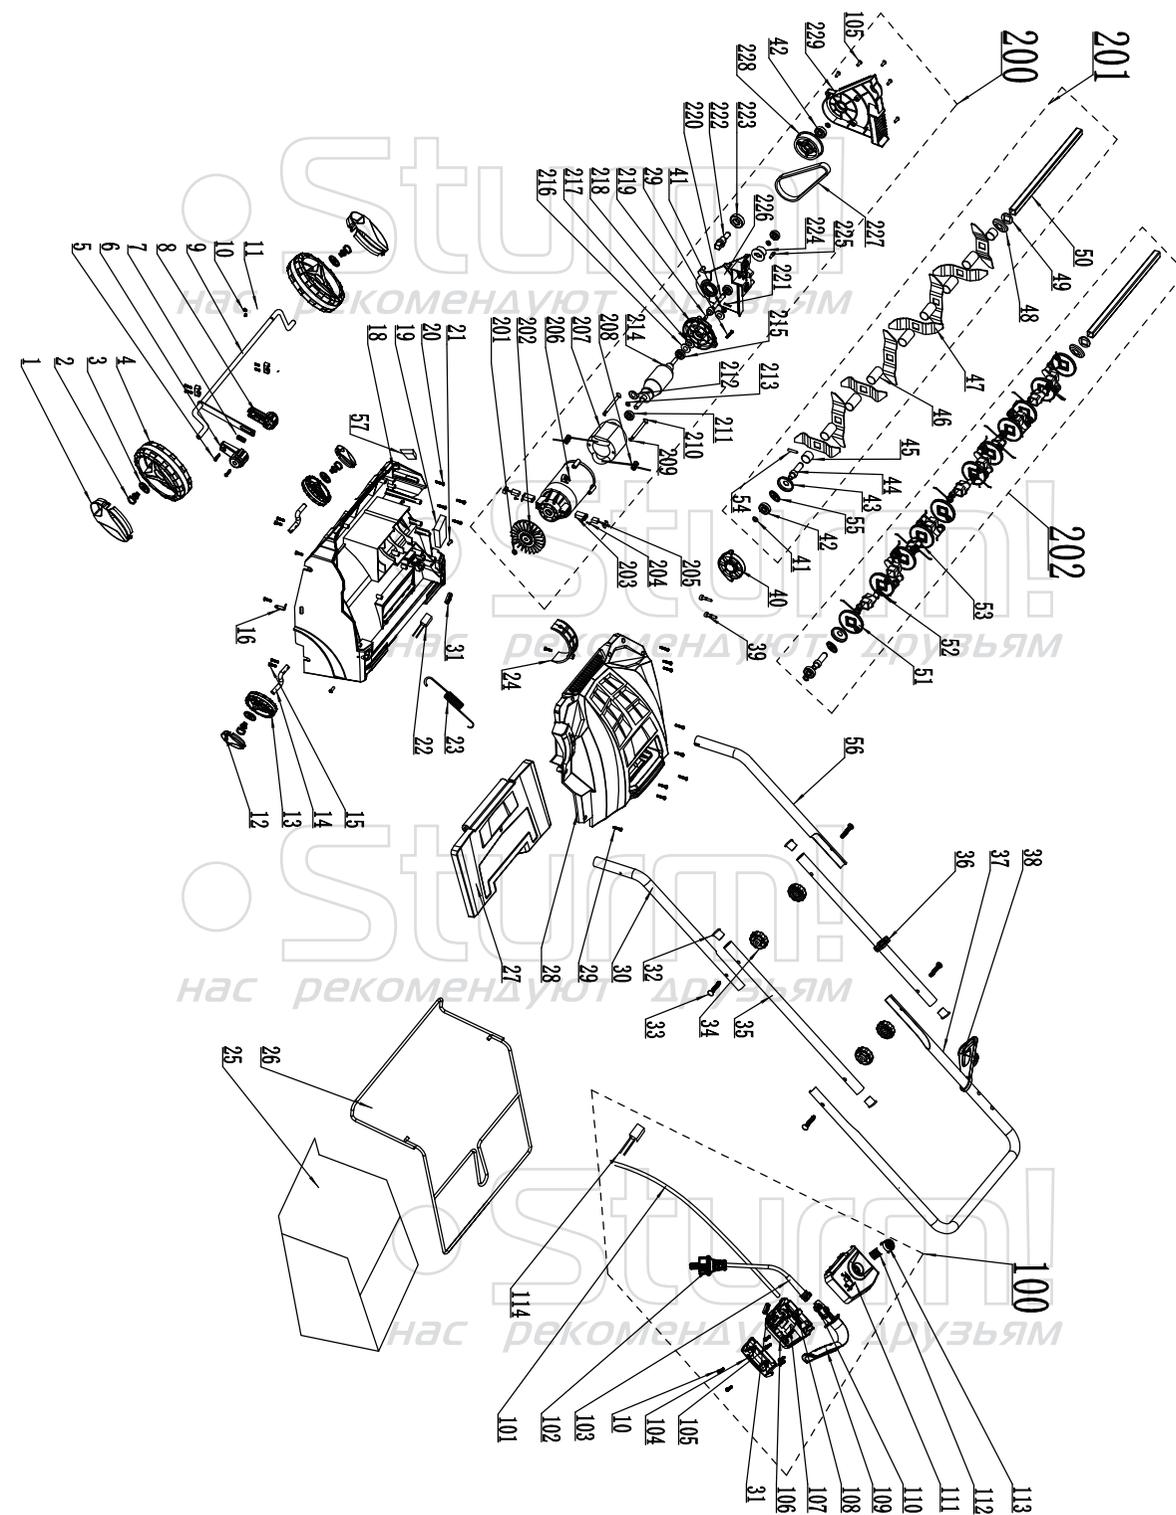

NO.	DESCRIPTION	NO.	DESCRIPTION
1	FRONT WHEEL COVERS	54	PIN $\Phi 4 \times 25$
2	BOLT M5X12	55	WASHER $\Phi 13$
3	WASHER $\Phi 5 \times \Phi 16 \times 1.5$	56	RIGHT LOWER HANDLE
4	FRONT WHEEL	57	FILTER SPONGE 2#
5	SCREW ST4*16	100	SWITCH BOX ASSEMBLY
6	"DEPTH ADJUST HANDLE (LEFT)"	101	INTERCONNECT CABLE
7	SPRING	102	PLUG
8	DEPTH ADJUST HANDLE(RIGHT)	103	CABLE SLEEVE
9	FRONT WHEEL BRACKET ASSEMBLY	104	SWITCH BOX PRESS PLATE
10	SCREW ST4*25	105	SCREW ST4X18
11	PRESS PLATE	106	SWITCH BOX LEFT
12	REAR WHEEL COVERS	107	SWITCH
13	REAR WHEEL	108	SWITCH BOX CONNECTING ROD
14	BACK WHEEL SPINDLE	109	SWITCH TRIGGER
15	SCREW ST5*25	110	SPRING
16	RETAINING PLATE	111	SWITCH BOX RIGHT
18	HOUSING	112	SPRING
19	FILTER SPONGE 1#	113	SWITCH BUTTON
20	SCREW ST5*25	114	CAPACITANCE
21	SCREW ST4*16	200	MOTOR ASSEMBLY
22	THERMAL CUT-OUT	201	CIRCLIP $\Phi 8$
23	TENSION SPRING	202	FAN
24	WIND DEFLECTOR	203	CARBON BRUSH HOLDER
25	COLLECTION BAG	204	SCREW ST3X12
26	COLLECTION BAG FRAME	205	CARBON BRUSH
27	GRASS BAG COVER	206	MOTOR HOUSING
28	HOUSING COVER	207	STATOR
29	SCREW ST4*20	208	INDUCTANCE
30	LEFT LOWER HANDLE	209	SPRING WASHER $\Phi 4$
31	CABLE ANCHORAGE	210	SCREW ST4X65
32	MIDDLE HANDLE PLUG	211	BEARING 608 RS
33	COACH BOLT M6x45	212	WOOL FELT
34	KNOB	213	WASHER $\Phi 8$
35	MIDDLE HANDLE	214	ROTOR
36	CABLE CLAMP	215	BEARING 6900 RS
37	UPPER HANDLE	216	GASKET
38	CABLE HOOK	217	WOOL FELT
39	BOLT M5X16	218	GEAR BOX
40	BEARING SEAT	219	NEEDLE BEARING HK0608
41	CIRCLIP $\Phi 10$	220	GEAR SHAFT
42	BEARING 6000RS	221	PIN $\Phi 3 \times 16$
43	DUST PROOF COVER LEFT	222	OUTPUT SHAFT
44	CONNECTING SHAFT	223	BEARING 6002 2RS
45	BLADE BUSHING SHORT	224	SMALL BELT WHEEL
46	PLASTIC BUSHING	225	BOLT M4X20
47	BLADE	226	BELT WHEEL BRACKET
48	DUST PROOF COVER RIGHT	227	BELT
49	GASKET	228	BIG BELT WHEEL
50	BLADE SQUARE TUBE SHAFT	229	BELT WHEEL BRACKET COVER
51	CLAW SPRING FIXING FRAME COVER PLATE	201	SCARIFIER BLADE ASSEMBLY
52	CLAW SPRING	202	COMB BLADE ASSEMBLY
53	CLAW SPRING FIXING FRAME		