## AC932100

		AC932	2100	
Г	No.	DESCRIPTION	No.	DESCRIPTION
	(1	screw	42	flat key
	2	washer	43	rotor
	_3	exhaust elbow	44	end cover of motor
	4	cylinder head	45	screw
нас	5) (	air filter / PAV / OT A	46	lining for fan housing
	6	cylinder head gasket	47	fan
Ī	7	valve plate	48	screw
Ī	8	valve plate	49	screw
Ī	9	aluminum gasket	50	flat gasket
Ī	10	cylinder gasket	51	fan housing
Ī	11	cylinder	52	capacitor box cover
	12	screw	53	start capacitor
Ī	13	washer	54	terminal
Ī	14	cylinder gasket	55	over-current protector
	15	gas ring	56	running capacitor
	16	oil ring	57	capacitor box
Ī	17	piston	58	nut
Ī	18	spring clip	59	washer
Ī	19	piston pin	60	wheel
Ī	20	rod	61	wheel axle
Ī	21	oil mirror	62	drain valve
	22	oil mirror gasket	63	screw
	23	screw	64	washer
	24	crankcase front cover	65	foot mat
\ <u>76</u>	25	front cover gasket	66	nut
	26	breather	67	release pipe
- ( )	27	crankshaft	68	Tank
	28	crankshaft screw	69	check valve
	29	crankcase	70	handle with rubber sleeve
Hac	30	screw//2HAV/OT A	D 1713 E	cable with plug
	31	washer	72	release pipe
	32	U pipe	73	pressure gauge 50
	33	paper mat	74	connection
	34	stator including alu housing	75	pressure gauge 40
	35	locating ring	76	quick connection
	36	cross connection	77	regulator
	37	unloading valve	78	1/4 ball Valve
	38	screw	79	pressure switch
	39	oil seal	80	safety valve
	40	bearing 6205	81	air tank plug
L	41	gasket of capacitor box	82	1/2 ball Valve(optional)
		gasket of capacitor box	82	<u> </u>

нас рекомена у AC932100-EX-RUS220830