



HCD1865BLC

NO.	Part list	NO.	Part list
1	Chuck	13	A belt buckle
2	Gearbox assembly	14	Push spring 1
3	Bearing (625)	15	Self-propelled screw
4	Push spring 2	16	Tail cover
5	High and low speed push button	17	Screw
6	Seat shrapnel	18	Battery pack
7	Shell	19	Block support
8	Light button	20	Batch
9	Push rod	21	Bit
10	Switch	22	Stator
11	Brushless control panel	23	Rotor
12	Large body contact piece support	24	Charger

RU-HS20190220